

Quiéta Clip, straight and roll

Individual heavy duty freestall mats

1 Fixing elements

8 x 80 mm stainless steel knock-in screw with stainless steel washer.

Fixation
locations



2 Storage

If mats are not installed immediately, it is better to shelter them from light and bad weather. Before starting the installation, make sure that the temperature is between 8 °C and 30 °C.

3 Support


The support for the mats shall be rigid enough (concrete or asphalt). Concrete must be as smooth as possible (rough concrete could damage the mat) and as flat as possible (holes in concrete will be visible on the mat) so that the mat works properly. The surface will ideally have a slope of about 5% towards the back.

Before laying, clean up the support and let it dry.

4 Laying

Mats must be laid so as to leave an empty space of 3 to 5 cm at the back of the freestall (it is advised to draw a line using a rule or a cordex).

Quiéta Clip : connect the mats with each other, not too tightly. Moisturise the sealing gasket that comes over the puzzles with soapy water, it will be easier to fit in. Use preferably a rubber mallet to insert progressively the sealing gasket from the front part of the mat to its back part. Fasten them (see end of the paragraph).

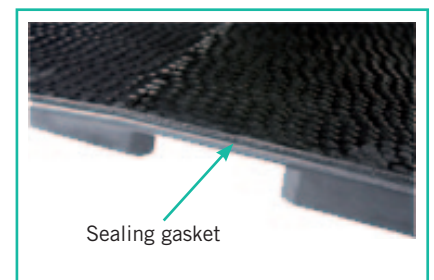

Quiéta with straight borders: place the mats against each other, not too tightly. Fasten them (see end of the paragraph).

Quiéta roll: if there are no freestalls, lay the roll in the stall and unroll it. Adjust to keep the recommended spacings at the back and fasten (see end of the paragraph). If the freestalls are laid, unroll the Quiéta in the passageway behind the stalls to equip. Pull the mats into the freestalls by hand and position them to keep the recommended spacing at the back of the freestall. Fasten (see end of the paragraph).

Fixing is made on the upper part, on marked locations (3 screws at the front). Drill the support using the appropriate 8 mm drill bit, put the dowel then put the screw trying not to crush the mat too much.

5 Maintenance

In order to keep the freestall dry and to ensure the well-being of the animal, the use of a bedding (straw, drying powder) is highly recommended. Mats can be scraped using a hand scraper and cleaned with a water jet cleaner or a high-pressure cleaner (do not exceed 60 bars and 30 °C).